Hybrid S14,15 intercooler fitting

Installation instruction



Parts list
Piping, silicon hose and super clamp kit



Description	Qty
2.5" silicon hose	1
2.75" silicon hose	2
2.5-3" silicon hose	1
3"silicon hose	1
3" super clamp	2
2.5"super clamp	3
2.75"super clamp	5
Top bracket (only for S14)	2
Bottom bracket	2
Hybrid monster intercooler	1

Note Picture may be different than the actual product! It is a reference guide only!

S14 top bracket fitting

Remove the shaded std parts








2. Bend the car Horns and remove Standard intercooler, piping and Install bottom intercooler bracket.




1. Trim the bottom splash tray

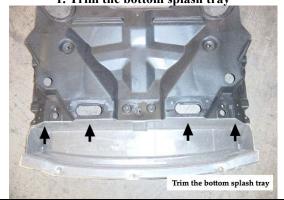

2. Trim the front driving light holder










4. Trim both chassis noses




4. Fit the lower bar bracket




6. Cut a 80mm O.D hole under the battery tray

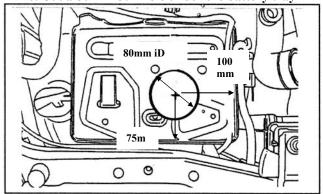


7. Relocate battery tray

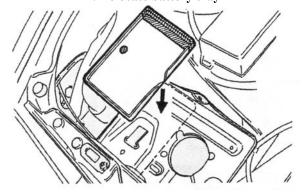

8. Fit Inlet pipe position

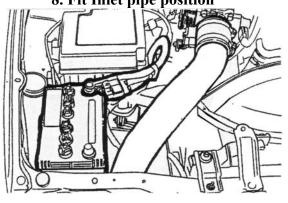



9. Fit inlet pipe and cast pipe

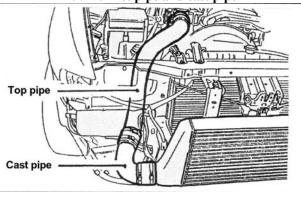




 $Note \ 1\\ For S14\ please\ use\ the\ enclosed\ bracket\ to\ secure\ the\ intercooler\ from\ the\ top\ ,\ the\ rest\ procedure\ is\ the\ same\ as\ the\ S15\ kit.$

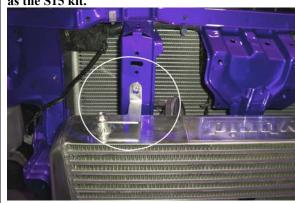

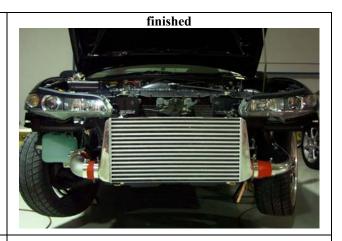

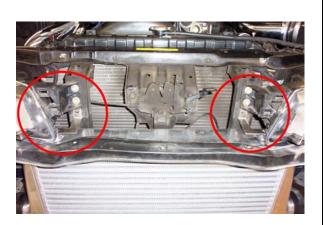

LIMITED WARRANTY

Hybrid Development (HK) ltd will warranty for the period of 1 year from original purchase against all defects in workmanship and materials. Hybrid Development (HK) ltd is not responsible for expenses incurred for labor, personal injury or inconvenience. Hybrid Development (HK) ltd sole responsibility is to offer a replacement product or to repair the damaged product. Hybrid Development (HK) ltd cannot warranty products damaged by improper installation. All other products sold by Hybrid Development (HK) ltd are warranted by the original manufactures and is not the responsibility of Hybrid Development (HK) ltd.

All products are for racing use only.